


1

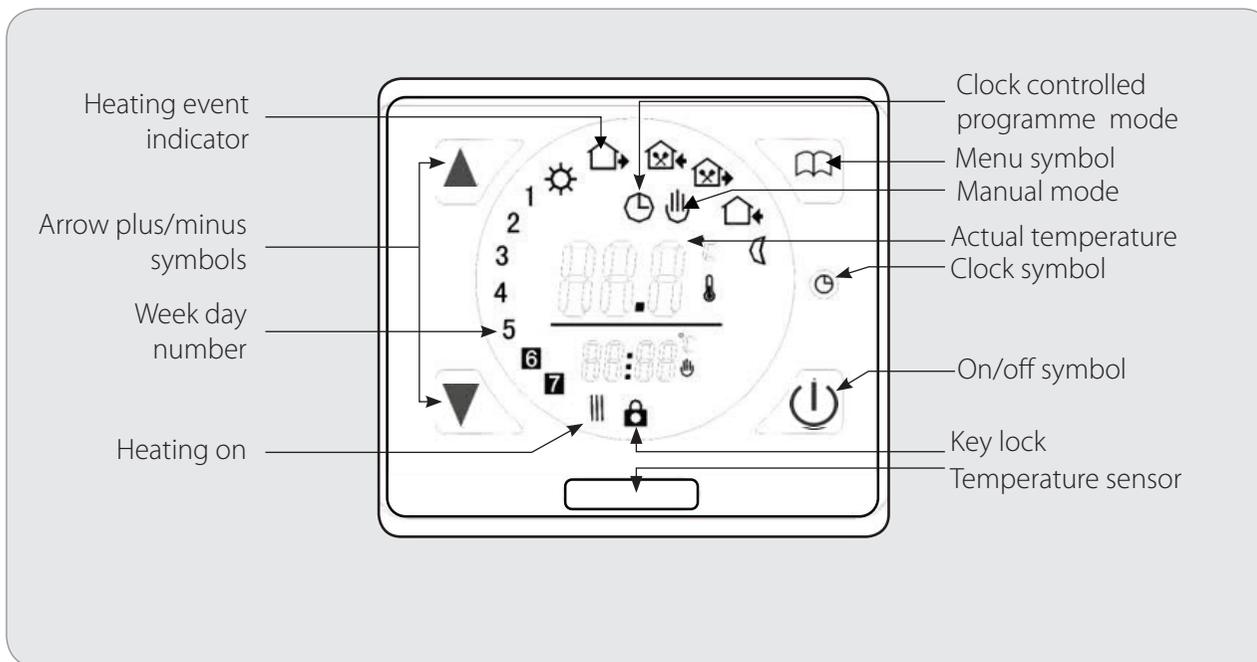

**Copying the 1- 5 settings for 6 or all 7 days**

PRESS TO TURN OFF then press and menu symbol together you are now in **advanced settings**. Now press menu symbol 5 times to display PrG - you can now set day 6 or days 6 & 7 to be the same as days 1- 5 by pressing or arrow symbols. When the screen shows day 6 with days 1- 5 OR days 6 & 7 with days 1- 5 you are finished. Switch unit OFF and back ON to return to main screen by pressing symbol.

**Setting Thermostat**

To start programming press the menu symbol for 5 seconds - the sun symbol will appear on the left hand side of the screen together with the time that the first event will start. You can change the time by using the up and down symbols as required and confirm by pressing the menu symbol.

Next is the temperature you require during the first heating event session - use the up and down arrow symbols until satisfied and then confirm by pressing the menu symbol. There are 6 heating event times to input and 6 temperature settings to confirm - if you make a mistake press the menu symbol repeatedly and go through the complete cycle again until you return to the required place.

**Function**

**Manual override mode**

press menu symbol until hand symbol appears. The scheduled period is overridden, set the temperature to your individual requirements using or arrow symbols and the thermostat will operate at this temperature permanently.

**Set the time and day of the week**

Press the clock symbol for 5 seconds. The minutes will start flashing - use the up and down symbols to change minutes as required and confirm your choice by pressing the symbol

The hour will now flash, repeat the same process to adjust and confirm by pressing the key. A number between 1 to 7 will now start flashing on the left hand side of the screen 1 = Monday, 7 = Sunday. Use the up and down symbols to change as required and confirm your choice by pressing the symbol. The time and day are now set.

**Second Choose either a 5, 6 or 7 day cycle**

The programmer offers you the choice of 6 heating events each day of the week with the choice of different temperatures in each event - either for 5 days of the week plus all day heating on days 6 and 7 (the weekend) with two heating events.

OR the same on/off timing for days 1 - 6 plus day 7 with all day heating.

OR the same 6 heating events for all 7 days. The programmer is set at the factory for the 5 plus 2 cycle.

 **Clock controlled programme mode.**

To exit manual override press menu symbol  until clock symbol appears. The thermostat will operate automatically according to the programmed temperature and time.

 &  **single period manual override comfort mode**

While in clock  controlled mode press  or  arrow symbols until the clock  and hand  symbols appear together. This enables you to manually override the scheduled heating event's temperature setting, so the temperature can be temporarily changed for a single heating event, the 'comfort mode' temperature is reset at the next heating event when the thermostat will return to the scheduled program.

2

 **keylock function.**

Once thermostat has been programmed, press  and  arrow symbols together for 5 seconds to lock the touch screen, the keylock symbol  will be displayed. Repeat these steps to unlock touch screen.

Programming: 6 heating event Time & Temperature							
Press the  key for 5 seconds to start programming							
Key	heating Event	Symbol	Time		Temperature		
			Factory Settings		Factory Settings		
  	Day 1-5	1		06.00	Set the start/end time	20°C	Set temperature required
		2		08.00		15°C	
		3		11.30		15°C	
		4		12.30		15°C	
		5		17.00		22°C	
		6		22.00		20°C	
	Day 6/7	1		08.00		22°C	
		2		23.00		15°C	

**Please note:**

If using an external floor probe to limit floor temperature, then advanced settings 'SENSOR MODE' must be set to 'ALL' and the 'ADJUST LIMITATION TEMPERATURE VALVE' be set to the desired limit temperature, i.e. 27°C for wood flooring.

Continued on sheet 3 >>>

**Advanced settings:** turn the thermostat OFF by pressing the ON/OFF  symbol. Then press and hold  menu symbol while turning the thermostat back on (by pressing  symbol once) until the thermostat enters the 'advanced settings' mode. Press menu  symbol to advance to the required function. Press  or  symbols to change individual function settings. To save settings and EXIT this mode, press ON/OFF  symbol.

Key/ symbol to open	No. of times to press	Symbol	Function	▼ or ▲
	1	1Adj	<b>1 Adj</b> Measured temperature display and adjustment	Adjusts current measured temperature value. Range +/- 9.9°C
	2	2SEN	<b>2SEN</b> Sensor selection	IN : Built in sensor - shows & ONLY measures air temp OUT : Floor sensor - shows & ONLY measures probe temp (can be in floor or probe housing) ALL : Both sensors - shows air temp or set probe temperature (used as a max temperature for floors - floor sensor is limiter)
	3	3Lir	<b>3LIT</b> Adjust limitation temperature value	Adjust limitation value range 5 - 60°C (Probe limit temperature, i.e. 27°C for wood floors)
	4	4diF	<b>4diF</b> Switching differential	Adjusts switching differential setting range 0.5 - 10°C
	5	5Lrp	<b>5LTP</b> Enabling/disabling frost setting when unit is off	Switches frost setting function ON/OFF
	6	6PrG	<b>6PRG</b> Daily timer sequence	Selects 5/2 day mode, 6/1 day mode, 7 day mode OR OFF
	7	7rLE	<b>7RLE</b> Not available on this model. Potential free output and main output synchronous/asynchronous direction	<b>Do not adjust KEEP FACTORY SETTING = 00</b>
	8	8dLy	<b>8DLY</b> Not available on this model. Potential free time lapse output time	<b>Do not adjust KEEP FACTORY SETTING = 0</b>
	9	9Hri	<b>9HIT</b> Max temperature setting value	Adjusts maximum temperature setting value from 35 - 90°C
	10	AFAC	<b>AFAC</b> Reset to factory settings	Press  key for 5 seconds until '- - -' is shown to restore factory settings

**NOTE:** If "ERR" is displayed on the screen when the thermostat is first turned on - enter advanced settings (as described above) and advance to function "2SEN". Press  or  symbol so that "IN" reads on the screen. Switch the unit OFF and back ON to clear and the thermostat will return to normal working.

**Most other adjustments should be made by a qualified person**

## Your Notes:

4

Tech support opening hours are subject to change - please visit our website for the latest information