

## **WUNDA** THE BRAND YOU CAN TRUST


### **E8.583RF Wireless Control Centre**

### O 800 5420 816 O

### www.wundatrade.co.uk

# **E05**

### **Description of work state**

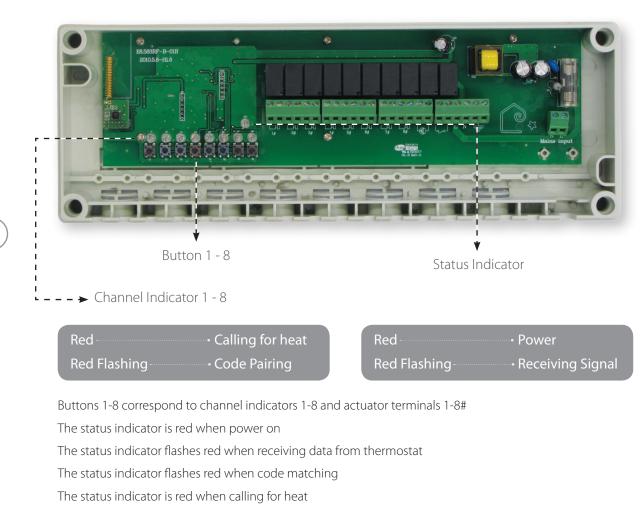

### Code pairing method

On Thermostat (E8.2RF) enter the advanced settings by first switch off thermostat by pressing (1) then hold (1) while switching thermostat back on (1). Next Press (1) 4 times untill the following is displayed



At Wiring Centre press the button for required channel to be matched (A1-A8) for 3 sec until corresponding indicator flashes, the channel is now ready to be code matched.

## (NOTE: Indicator light will go out after 30 seconds of inactivity and process will need repeating)

On thermostat press ⓐ and 奈 will flash 3 time and then go out, the indicator light in the wiring centre will also go out indicating that code match has been successful

One thermostat can be matched to multiple channels or you can have an individual thermostat matched to each individual channel.

#### Parameters

Voltage : AC230V Current : Max 3A Wireless Frequency Output: 433Mhz Effective Transmission Distance: 200m empty space Ambient Temperature : -5~50°C Pump Linkage: 230V sub-output Boiler/Zone Valve Linkage: Volt free or 230V with link Protective Housing: Ip40 Weight : 1 KG