


WUNDA 


Welcome to WundaSmart

Welcome to your Smart Screenless Thermostat

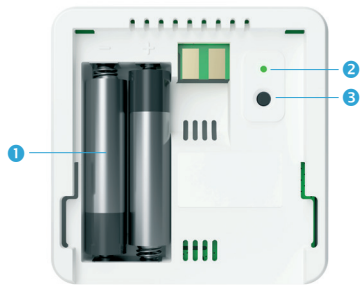


- 1 2 × AAA Alkaline Battery
- 2 Pairing LED
- 3 Pairing Button
- 4 Terminal for attaching optional floor probe
- 5 Wall mounting holes for 2 × screws (5×30 mm or 4×20mm)

Open the app, install & use

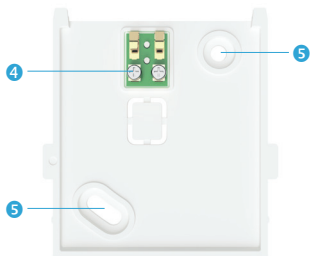

Quick install guide

- A. Put the batteries into the compartment
- B. Launch your App and choose the **Room** where you want to add your Smart Screenless Thermostat.
- C. Press **Add Screenless Smart Thermostat** button in your app, then press **+** to pair
- D. For the best results, we recommend mounting the screenless thermostat to the wall out of direct sunlight.

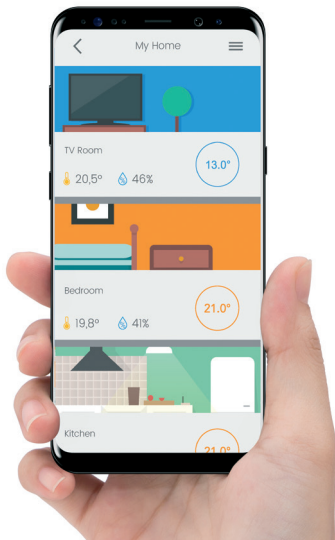

Need our help?

Our designated support staff
are on hand to answer all your
questions

help@wundasmart.com

0800 083 2677